



INSTRUCTIONS FOR REMOVING AND REPLACING THE BOTTOM MODULE ON
BEVLES HP – HEATER PROOFER UNITS



Step 1- Turn off and unplug the unit. Wait until the unit is not hot to the touch. Remove any remaining liquid from pan.

Step 2 - Remove wing nut on the back lower portion of the unit.

Step 3 - Open door, and carefully pull module from the front out of the cabinet.

Step 4 – Carefully slide new module into place insuring that it is in all the way, and that it is under the back air deflector.

Step 5 – Replace wing nut and make sure that the door closes properly.

Step 6 – Plug unit back into power supply, and pre-heat prior to use.

bevles.com

833-537-3307 – tech support